Disposal & Dismantling

Article number:4308798Light source:LT2207_3BK_module

Dismantling of LED driver and light source for disposal purposes

Firstly, disconnect the product from any power supply. Make sure that the mains power line is voltage-free – turn off safety cut-out or unscrew the protection fuse. The switch must be in OFF position. Secure it against unauthorized switching on.

Steps 1-3: Remove the screws and take out the bracket from the lamp base.

Step 4: Loosen the screws on the luster terminal and disconnect the wires.

Step 5-7: Remove the wire conjunction.

Step 8: Take out the LED driver. Dispose the LED driver according to the relevant legal regulations.

Step 9: Remove the nut.

Step 10: Remove the end caps of the light bars.

Step 11: Remove the covers of the light bars and take out the light sources. Dispose of the light sources according to the relevant legal regulations.

Manufacturer

DI-KA Vertriebsgesellschaft mbH & Co. KG Oberstrasse 4 59755 Arnsberg Germany Tel: +49 2932 9022580 http://www.di-ka.net/



